PORTABLE 58MM RECEIPT PRINTER IMPRESORA PORTÁTIL DE RECIBOS DE 58MM



MODEL QOP-T58UB-RP





58mm





70mm/s



2600mAh

Please read carefully before using your equipment and save it for future reference. Por favor lea cuidadosamente antes de usar su equipo y guárdelo para uso de futuras consultas.

Protective Cover Cubierta Protectora

USER MANUAL / MANUAL DE USUARIO

WARRANTY AND PRODUCT INFORMATION

These terms shall be governed and construed under laws of the jurisdiction in which the product was purchased, if any term here is held to be invalid or unenforceable, such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Qian reserves the right to amend any term at any time without notice.



PRINTER PARAMETER

Item	Parameter
Printing Method	Thermal Line
Printing Width	48mm
Resolution	384 dots/line (8dots/mm, 203dpi)
Printing Speed	70mm/S
Interface	USB+Bluetooth
Line spacing	3.75mm(Can adjust line spacing by command)
Line No.	Font A:32character /Line Font B:42character/Line
Character Size	ANK character Font A 1.5×3.0mm (12×24dots) Font B 1.1×2.1mm (9×17 dots)
Extended Character	PC437/Katakana/PC850/PC860/PC863/PC865/WestEurope/ Greek/Hebrew/EastEurope/Iran/WPC1252/PC866/PC852/PC858/ IranII/Latvian/Arabic/PT151,1251/PC737/WPC/1257/ThaiVietnam/ PC864/PC1001/(Latvian)/(PC1001)/(PT151,1251)/(WPC1257)/ (PC864)/(Vietnam)/(Thai)
Bar code	UPC-A/UPC-E/JAN13(EAN13)/JAN8(EAN8)/CODE39/ITF/ CODABAR/CODE93/CODE128/ORCode
Graphics	Supports bitmap download and print (support each bitmap size
printing	Max.8K, download up to 5pcs)
Paper Type	Thermal
Paper Width	57.5±0.5mm
Paper thickness	≤0.12mm
Paper Diameter	≤50mm
Feeding Way	Easy paper feeding (Clam shell type)
Commands	ESC/POS
Power Type	Rechargeable Lithium polymer battery 3.7V 2600mAh
Charger	5.0V/1A
Weight	230G
Dimension	110*82*60(MM)
Operating	Temp: 5 ~ 45°C, Humidity: 10 ~ 80%
Storage	Temp: -10 ~ 50°C, Humidity: 10 ~ 90% (No Dew)
Reliability Print head life	50KM (Printing Density≤12.5)
Operating System	Support Windows/ Android/ Mac/ iOS/ Linux operating system. (Driver available for Windows/ Linux/ Mac)

PRINTER COMPONENTS NAME



INTERACTIVE INTERFACE

1. Battery Charge indicator Light

All on means battery power is full; only one light on: means the battery is about to run out, to ensure normal use, please charge the battery. When the printer printed out the "Warning: Low battery please charge." It means the battery is low, please charge it.

When the printer printed out "Error: Low power, printer will shut down please charge."and the printer is auto power off, that means the battery is extremely low.

2. Error Indication Light

The error indicator light flicker, two possible conditions:

Printer is short of paper, place thermal paper properly. Error relief

■ Temperature of printer core is too high, so that the printer stops working, put printer in low or normal temperature conditions restart the printer when the printer's temperature reduced. Error relief.

3. Charge Indicator

When charging the battery, the red will be light on.

When charged full the blue light will be light on.

At this time, please pull the power adapter plug, and you can use it normally now.

4. Bluetooth Connection indication

When a device is connected to the printer through Bluetooth, the status indicator light is on blue, when no device connected to Bluetooth the light will be off, when printer has some error the error light will be on.

BASIC OPERATION

1. Start

Continue to press the Power button for 3 seconds, the printer starts.

2. Shut Down

When printer is on, continue to press the Power button for 3 seconds, the printer is powered off.

3. Print Self-Test Page

In shutdown status and install paper, please press feed button, and power button at the same time. When error light on and turn red, a self-test page will be printed out.

4. Chinese/English Mode Setting

In shutdown status and install paper, please press feed button, and power button at the same time. When error light on, keep pressing it until it off, please release the two buttons. The printer will print out "You are under Chinese mode", that means the setting to Chinese mode is completed. If you want to change to "English mode", please repeat the above steps.

5. Change Density

In shutdown status and install paper, please press feed button, and power button at the same time. When error light on keeps pressing it until it off and on again, please release the two buttons. The printer will print out "You are under Chinese mode", that means the setting to Chinese mode is completed. If you want to change to "English mode", please repeat the above steps.

6. Change to Hex Mode

In shutdown status and install paper, please press feed button, and power button at the same time. When error light on keeps pressing it until it off and on, then off again, please release the two buttons. The printer will print out "The printer is under hex mode", that means the setting to hex mode is completed. If you want to change to "Normal mode" please repeat the above steps.

COMMUNICATION

1. USB Communication:

This printer USB interface use standard USB2.0 communication protocol which can easily connect to the windows device, android equipment, Linux equipment, and equipped with corresponding driver and SDK, let your print arbitrarily.

Note: the printer driver and SDK please check the CD or download from the official website or ask for your supplier.

2. Bluetooth Communication:

The printer provide Bluetooth 3.0 and Bluetooth 3.0/Bluetooth 4.0 dualmode two Bluetooth communication can easily connect to the windows device, android and IOS devices work, and communication distance up to 15m.

Note: Default match password :1234

3. The Bluetooth configuration in windows

Windows 10 Bluetooth configuration

Step 1: Make sure your device (like PC/ Laptop) has Bluetooth function, and the Bluetooth is activated (You can find the Bluetooth sign"¹ in the device), shown as below:



Step2: Power on the Bluetooth printer.

Step 3: Click "Add a Bluetooth Device", then choose "Add Bluetooth or other device", shown as below:

Add a Bluetooth Device		
Show Bluetooth Devices	Settings	
Send a File Receive a File	යි Home	Bluetooth & other devices
Join a Personal Area Network	Find a setting P	+ Add Bluetooth or other device
Open Settings		Bluetooth
Remove Icon	Bluetooth & other devices	On I
	B Printers & scanners	Now discoverable as "DESKTOP-PGIHIOL"

Step 4: Choose Bluetooth device, and then please wait until the Bluetooth printer is found.

(If the "Bluetooth Printer" is founded, it will be listed on the screen) shown as below:



Step 5: Enter the PIN (1234) for Bluetooth Printer, then connect:



Step 6: If the Bluetooth printer is shown "Paired ", that means it's connected successfully, shown as below:



Step 7: The Bluetooth printer will be automatically assigned a COM port.

Click on "More Bluetooth options" and check the Bluetooth settings to find out which COM port the Bluetooth printer is assigned to.

Related settings Devices and printers
Sound settings
Display settings
More Bluetooth options
Send or receive files via Bluetooth

0 0100	tooth Sett	ings					\times
Options	COM Por	ts Hardwar	e				
Disc	overv						
	Allow Blue	tooth devic	es to find th	is PC			
1	Bluetoo	oth devices (will see the	name of	this PC.		
Noti	fications Alert me v	vhen a new	Bluetooth d	evice w	ants to conne	ect	
Sho	ow the Blu	etooth icon	in the notif	ication	area		
					Restore D	efaults	
			OK		Cancel	Apply	
							_
8 Blue	tooth Set	tings					×
8 Blue	etooth Set	tings					×
8 Blue	tooth Set	tings rts Hardwa	re				×
8 Blue Options	etooth Set	tings rts Hardwar	re				×
8 Blue Options This I	etooth Set COM Po	tings rts Hardwar g the COM (;	re serial) ports	listed be	elow. To dete	rmine	×
Blue Options This I whet	COM Po COM Po PC is using her you ne	tings rts Hardwar g the COM (eed a COM p	re serial) ports port, read th	listed be	elow. To deten	rmine t came	×
Blue Options This I whet with	COM Po COM Po PC is using her you ne your Bluet	tings rts Hardwar g the COM (eed a COM p ooth device	re serial) ports port, read th	listed be e docun	elow. To deten mentation that	rmine t came	×
Blue Options This I whet with	COM Po COM Po PC is using her you ne your Bluet	tings rts Hardwar g the COM (teed a COM p ooth device	re serial) ports port, read th	listed be e docun	tlow. To dete nentation tha	rmine t came	×
Blue Options This I wheth with	COM Po COM Po PC is using her you ne your Bluet	tings rts Hardwar g the COM (p cod a COM p cooth device Direction	re serial) ports port, read th Name RiveTanti	listed be e docum	elow. To dete nentation tha	rmine t came	×
Blue Options This I whet with COI	COM Por COM Por PC is using her you ne your Bluet t M5	tings ts Hardwar the COM (p ted a COM p tooth device Direction Incoming	re serial) ports port, read th Name BlueTooth	listed be e docum	elow. To detente the transformed to the transformed	rmine t came	×
Blue Options This I whet with COI	COM Po COM Po PC is using her you ne your Bluet t M5 M6	tings Hardwar the COM (ed a COM p ooth device Direction Incoming Outgoing	re serial) ports port, read th Name BlueTootl BlueTootl	listed be e docum n Printer n Printer	elow. To deten nentation tha 'HS_SPP'	rmine t came	×
Blue Options This I wheth with COI	COM Po COM Po PC is using her you ne your Bluet t M5 M6	tings rts Hardwar g the COM (ced a COM p ooth device Direction Incoming Outgoing	re serial) ports port, read th Name BlueTootl BlueTootl	listed be e docum n Printer n Printer	elow. To deten nentation tha 'HS_SPP'	rmine t came	×
Blue Options This I wheth with COI	COM Po COM Po PC is using her you ne your Bluet t M5 M6	tings tts Hardwar g the COM (teed a COM p ooth device Direction Incoming Outgoing	re serial) ports port, read th Name BlueTootl BlueTootl	listed be e docum n Printer n Printer	elow. To deter nentation tha "HS_SPP"	rmine t came	×
Blue Options This I wheti with COI	COM Po COM Po PC is using her you ne your Bluet t M5 M6	tings the COM (ted a COM p ooth device Direction Incoming Outgoing	re serial) ports port, read th Name BlueTootl BlueTootl	listed be e docum n Printer n Printer Add	How. To deter rentation tha "HS_SPP"	rmine t came emove	×
Blue Options This I wheti with COI	COM Po COM Po PC is using her you ne your Bluet t M6	tings Hardwar g the COM (eed a COM p ooth device Direction Incoming Outgoing	re serial) ports sort, read th Name BlueTootl BlueTootl	listed be e docum n Printer n Printer Add	How. To detenentation that "HS_SPP"	rmine t came emove	×
8 Blue Options This I wheti with y COI	COM Po COM Po PC is using her you ne your Bluet t M5 M6	tings rts Hardwar g the COM (eed a COM p ooth device Direction Incoming Outgoing	re serial) ports port, read th Name BlueToott BlueToott	listed be e docum n Printer n Printer Add	elow. To detenentation tha	rmine t came emove	×
Blue Options This I wheti with COI	COM Po COM Po PC is using her you ne your Bluet t t M5 M6	tings tts Hardwar g the COM (eed a COM (cooth device Direction Incoming Outgoing	re serial) ports port, read th Name BlueTootl BlueTootl	listed be e docum Printer Printer Add	elow. To deten tentation that 'HS_SPP'	rmine t came emove	×

Step 8: Open the printer driver "Properties" and select to COM port used by the Bluetooth Printer. Remember that the COM port should have the same baud rate as the same baud rate as the Bluetooth serial port. (Factory Default Baud Rate: 115200,N,8,1.)



Windows 11 Bluetooth Configuration

Step 1: Locate the Control Panel in the launcher menu. Follow the instructions below:



Step 2: Go to the Control Panel and find "View devices and printers", shown as below:



Step 3: Find the "Printers and scanners" and click it, shown as below:



Step 4: Click "Add device" (Add a printer or scanner) shown as bellow:



Step 5: Select the correct printer according to the searched Bluetooth Name (BlueTooth Printer), link and enter the PIN code (1234), shown as bellow:



Step 6: It will then look like this, which means we have successfully connected the printer, now we need to select the correct port for printing.



Step 7: Go to Bluetooth & devices, select "View more devices", shown as below:



Step 8: Find "More devices and printer settings", shown as below:



Pa Devices and Printers	
\leftarrow \rightarrow \vee \uparrow 📾 > Control Panel > Hardware and Sound > Device	es ar
Add a device Add a printer	
Operation Operation Generic Monitor Generic Monitor Microshore Adde Device) Speakers (High Definition Device) Device)	
Printers Discosoft Print Discosoft Discosoft	
Bluetooth Printer Properties Control of the services Bluetooth This Bluetooth device offers the following services. To use a service, select the checkbox. Bluetooth Services Serial port (SPP) 'HS_SPP' COM4	
OK Cancel Apply	

Step 10: Open the printer driver "Properties", select the COM port that Bluetooth printer is used. Remember that the COM port should have the same baud rate as the Bluetooth serial port (Factory Default Baud Rate: 115200, N,8,1.)

Print to the f	ollowing port((s). Docu	ments will p	orint to th	ne first fre	e	
Port	Description		Printe	r			
COM1:	Serial Port						
COM2:	Serial Port Serial Port						
COM4:	Serial Port						
FILE:	Print to File Local Port		Micro	soft Prin	t to PDF		1
Add P	ort	D	elete Port		Config	ure Port	
Enable bio	lirectional sun	nort					
Enable pri	nter neoling	pore					

PRINTER REPAIR AND MAINTENANCE

1. Outer part and warehouse cleaning: please use a wet cloth gently wipe the printer surface and internal paper warehouse.

2. Printer core clean: printer core must be clean on time, especially the quality of printing is decline, cleaning methods are as follows: put cotton dipped in anhydrous alcohol and gently wipe the printer core ceramic parts until clean enough.

3. If find water inside printer, please immediately disconnect the printer power, and dry the printer naturally.

FAILURE ANALYSIS

Failure phenomenon	Failure cause	Solution
Printer red light flashing	Printer lack of paper Printer's temperature is too high	Install paper correctly Cool the printer naturally and restart for using
When the printer only take paper out but not print	Print paper install reverse	Pls install the print paper for a opposite direction
The printer prints fuzzy	The print head not clean for a long time	Put cotton dipped in anhydrous alcohol and gently wipe the printer core ceramic parts until clean enough
	The character colour in thermal paper no good	Pls choose high quality thermal paper
Power indicator only has the last lights on	battery is short of power	Pls charge the battery to avoid affect your normal use

GARANTÍA E INFORMACIÓN DEL PRODUCTO

Estos términos se regirán e interpretarán de acuerdo con las leyes de la jurisdicción en la que se compró el producto, si alguno de los términos en este documento se considera inválido o inaplicable, dicho término (en la medida en que sea inválido o inaplicable) no tendrá efecto y se considerará excluido sin invalidar ninguno de los términos restantes. Qian se reserva el derecho de modificar cualquier término en cualquier momento sin previo aviso.



PARÁMETROS DE LA IMPRESORA

Artículo	Parámetro
Método de impresión	Línea térmica
Anchura de impresión	48mm
Resolución	384 puntos/línea (8 puntos/mm, 203 ppp)
Velocidad de impresión	70mm/S
Interfaz	USB + Bluetooth
Espacio entre líneas	3,75 mm (se puede ajustar el interlineado mediante comandos)
Nº de línea	Tipo de letra A: 32 caracteres/línea Tipo de letra B: 42 caracteres/línea
Tamaño de los caracteres	Carácter ANK Tipo de letra A 1,5×3,0 mm (12×24 puntos) Tipo de letra B 1,1×2,1 mm (9×17 puntos)
Caracteres ampliados	PC437/Katakana/PC850/PC860/PC863/PC865/Europa Occidental/Griego/Hebreo/Europa Oriental/Irán/WPC1252/ PC866/PC852/PC858/IranII/Letón/Árabe/PT151,1251/PC737/ WPC/1257/TailandiaVietnam/PC864/PC1001/(c Letón)/ (PC1001)/(PT151,1251)/(WPC1257)/(PC864)/(Vietnam)/ (Tailandés)
Código de barras	UPC-A/UPC-E/JAN13(EAN13)/JAN8(EAN8)/CODE39/ITF/ CODABAR/CODE93/CODE128/QRCode
Impresión gráfica	Admite la descarga e impresión de mapas de bits (cada mapa de bits admite un tamaño máximo de 8K y una descarga de hasta 5 unidades).
Tipo de papel	Térmico
Anchura del papel	57.5±0.5mm
Grosor del papel	≤0.12mm
Diámetro del papel	≤50mm
Manera de cargarse	Fácil carga de papel (tipo concha de almeja)
Comandos	ESC/POS
Energía	Batería recargable de polímero de litio de 3,7 V y 2600 mAh
Cargador	5.0V/1A
Peso	230G
Dimensión	110*82*60(MM)
Funcionamiento	Temperatura: 5 ~ 45°C, Humedad: 10 ~ 80%.
Almacenamiento	Temperatura: -10 ~ 50°C, Humedad: 10 ~ 90% (sin rocío)
Fiabilidad, Vida útil del cabezal de impresión	50KM (Densidad de impresión≤12,5)
Sistema Operativo	Compatible con Windows/ Android/ Mac/ iOS/ Linux. (Controlador disponible para Windows/ Linux/ Mac)

NOMBRE DE LOS COMPONENTES DE LA IMPRESORA



INTERFAZ INTERACTIVA

1. Indicador luminoso de carga de la batería

Si se enciende completamente significa que la batería está cargada; si sólo se enciende una luz significa que la batería está a punto de agotarse; para garantizar un uso normal, cargue la batería. Cuando la impresora imprime el mensaje "Advertencia: Batería baja por favor cargue". Significa que la batería está baja, por favor cárguela.

Cuando la impresora imprime "Error: Batería baja, la impresora se apagará, por favor, cárguela". Si la impresora se apaga automáticamente, significa que la batería está muy baja.

2. Luz indicadora de error

La luz indicadora de error parpadea, dos condiciones posibles:

La impresora tiene poco papel, coloque el papel térmico correctamente.

■ La temperatura del núcleo de la impresora es demasiado alta, por lo que la impresora deja de funcionar, ponga la impresora en condiciones de temperatura baja o normal reinicie la impresora cuando la temperatura de la impresora se reduzca.

3. Indicador de carga

c Al cargar la batería, se encenderá la luz roja. Cuando esté completamente cargada, se encenderá la luz azul. En ese momento, desenchufe el adaptador de corriente y ya podrá utilizarlo con normalidad.

4. Indicación de conexión Bluetooth

Cuando un dispositivo está conectado a la impresora a través de Bluetooth, la luz indicadora de estado se enciende en azul, cuando no hay ningún dispositivo conectado a Bluetooth la luz estará apagada,Cuando la impresora tiene algún error la luz de error se encenderá.

FUNCIONAMIENTO BÁSICO

1. Inicio

Mantenga pulsado el botón de encendido durante 3 segundos, la impresora se iniciará.

2. Apagar

Cuando la impresora está encendida, mantenga pulsado el botón de encendido durante 3 segundos para apagarla.

3. Imprimir página de autodiagnóstico

En el estado de apagado e instalación del papel, pulse el botón de alimentación y el botón de encendido al mismo tiempo. Cuando la luz de error se encienda y se ponga roja, se imprimirá una página de autocomprobación.

4. Configuración del modo chino/inglés

En el estado de apagado e instalación del papel, pulse el botón de alimentación y el botón de encendido al mismo tiempo. Cuando se encienda la luz de error, manténgala pulsada hasta que se apague y suelte los dos botones. La impresora mostrará el mensaje "You are under Chinese mode" (Se encuentra en modo chino), lo que significa que se ha completado la configuración del modo chino. Si desea cambiar al "modo inglés", repita los pasos anteriores.

5. Cambiar la densidad

En el estado de apagado e instalación del papel, pulse el botón de alimentación y el botón de encendido al mismo tiempo. Cuando se encienda la luz de error, manténgala pulsada hasta que se apague y vuelva a encenderse. La impresora mostrará el mensaje "You are under Chinese mode" (Se encuentra en modo chino), lo que significa que se ha completado la configuración del modo chino. Si desea cambiar al "modo inglés", repita los pasos anteriores..

6. Cambiar a modo hexadecimal

En el estado de apagado e instalación del papel, pulse el botón de alimentación y el botón de encendido al mismo tiempo. Cuando la luz de error se encienda, manténgala pulsada hasta que se apague y vuelva a apagarse, entonces suelte los dos botones. La impresora mostrará el mensaje "La impresora está en modo hexadecimal", lo que significa que la configuración del modo hexadecimal se ha completado. Si desea cambiar al "modo normal", repita los pasos anteriores.

COMUNICACIÓN

1. Comunicación USB:

Esta interfaz USB de la impresora utiliza el protocolo de comunicación USB2.0 estándar que se puede conectar fácilmente al dispositivo de Windows, equipos Android, equipos Linux, y está equipado con el controlador correspondiente y SDK, deje que su impresión se instale de forma predeterminada.

Nota: Para obtener el controlador de impresora y el SDK, revise el CD o descárguelo del sitio web oficial o pregunte a su proveedor.

2. Comunicación Bluetooth:

La impresora tiene Bluetooth 3.0 y Bluetooth 3.0/Bluetooth 4.0 dualmode dos Bluetooth de comunicación que pueden conectarse fácilmente al dispositivo de Windows, Android y dispositivos IOS de trabajo, y la distancia de comunicación es de hasta 15 metros. **Nota:** Contraseña por defecto :1234

3. Configuración de Bluetooth en Windows

Configuración de Bluetooth en Windows 10

Paso 1: Asegúrese de que su dispositivo (como PC/portátil) tiene la función Bluetooth, y el Bluetooth está activado (Puede encontrar el signo Bluetooth[™] en el dispositivo), como se muestra a continuación:



Paso 2: Encender la impresora Bluetooth.

Paso 3: Haz clic en "Añadir un dispositivo Bluetooth" y, a continuación, selecciona "Añadir Bluetooth u otro dispositivo", como se muestra a continuación:

Add a Bluetooth Device		
Allow a Device to Connect		
Show Bluetooth Devices	Settings	
Send a File	ŵ Home	Bluetooth & other devices
Receive a File	Find a setting	Add Bluetooth or other device
Join a Personal Area Network	Parlar.	+
Open Settings	Devices	Bluetooth
Remove Icon	Bluetooth & other devices	On On
	B Printers & scanners	Now discoverable as "DESKTOP-PGIHIOL"

Paso 4: Seleccione el dispositivo Bluetooth y espere hasta que se encuentre la impresora Bluetooth.

(Si se encuentra la "Impresora Bluetooth", aparecerá en la pantalla) como se muestra a continuación:



Paso 5: Introduzca el PIN (1234) para la impresora Bluetooth y, a continuación, conecte:



Paso 6: Si la impresora Bluetooth se muestra "Paired ", significa que se ha conectado correctamente, como se muestra a continuación:



Paso 7: Se le asignará automáticamente un puerto COM a la impresora Bluetooth.

Haga clic en "Más opciones de Bluetooth" y compruebe la configuración de Bluetooth para saber a qué puerto COM está asignada la impresora Bluetooth.



8 Bluetooth Settings	\times
Options COM Ports Hardware	
Discovery Allow Bluetooth devices to find this PC A Bluetooth devices will see the name of this PC.	
Notifications Z Alert me when a new Bluetooth device wants to connect	
☑ Show the Bluetooth icon in the notification area	
Restore Default:	5
OK Cancel A	pply

8 Bluetoot	h Setting	5				×
Options CO	OM Ports	Hardware				
This PC is whether y with your	using the ou need Bluetoot	e COM (se a COM pe h device.	erial) ports ort, read the	listed below. e documenta	To determine tion that ca	ne me
Port	Dire	ection	Name			
COM5	Inc	oming	BlueTooth	Printer		
COM6	Out	tgoing	BlueTooth	Printer 'HS_S	SPP'	
				Add	Remo	ove
			OK	Car	ncel	Apply

Paso 8: Abra el controlador de impresora "Propiedades" y seleccione el puerto COM utilizado por la impresora Bluetooth. Recuerde que el puerto COM debe tener la misma velocidad en baudios que el puerto serie Bluetooth. (Velocidad de transmisión por defecto: 115200,N,8,1.)

POS-	80 Prop	erties						×
General	Sharing	Ports	Advanced	Colour Mana	igement	Security	Device	Settings
Ξ	РО	S-80						
Print to checke	o the fol ed port.	lowing p	ort(s). Docu	ments will p	rint to th	ne first free	2	
Port		Descripti	on	Printer				
	тз:	Printer P	ort					
C C C	OM1:	Serial Po	rt					1
C C C	OM2:	Serial Po	rt					
	OM3:	Serial Po	rt					_
	OM6:	Serial Po	rt					
U FI	LE:	Print to F	ile					-
D PC	ORTP	Local Po	rt	Micros	oft Prin	t to PDF		
	Add Po	rt		elete Port		Config	ure Port	
🗌 Enal	ble bidi	rectional :	support 😽					
🗆 Ena	ble prin	ter poolin	q					
		1	-					
				ОК		Cancel		Applynter

Configuración Bluetooth en Windows 11

Paso 1: Localice el Panel de Control en el menú de inicio. Siga las siguientes instrucciones:



Paso 2: Vaya al Panel de control y busque "Ver dispositivos e impresoras", como se muestra a continuación:



Paso 3: Busque "Impresoras y escáneres" y haga clic en él, como se muestra a continuación:



Paso 4: Haga clic en "Añadir dispositivo" (Añadir una impresora o un escáner) como se muestra a continuación:



Paso 5: Seleccione la impresora correcta de acuerdo con el nombre Bluetooth buscado (BlueTooth Printer), enlace e introduzca el código PIN (1234), como se muestra a continuación:

	ight need to enter the same	e passcode into the p	rinter.
1234	X		
Or tr			

Paso 6: Se verá así, lo que significa que hemos conectado correctamente la impresora, ahora tenemos que seleccionar el puerto correcto para imprimir.



Paso 7: Vaya a Bluetooth y dispositivos, seleccione "Ver más dispositivos", como se muestra a continuación:

Bluetooth & devic	es			
 Bluetooth Printer Driver is unavailable	Add device			
View more devices				
Bluetooth Discoverable as "AN"	On 🚺			

Paso 8: Busque "Más dispositivos y configuración de la impresora", como se muestra a continuación:





Paso 10: Abra el controlador de impresora "Propiedades", seleccione el puerto COM que utiliza la impresora Bluetooth. Recuerde que el puerto COM debe tener la misma velocidad en baudios que el puerto serie Bluetooth (Velocidad en baudios predeterminada de fábrica: 115200, N,8,1.)

neral	Sharing	Ports	Advanced	Colour Managemen	t Security	Device Setti
	PO	S-80				
rint to	o the fol	llowing p	ort(s). Docu	ments will print to	the first fre	c
hecke	ed port.	Description		Deinter		
ροπ		Descript	ion .	Printer		
	13:	Printer P	ort			
		Serial Po	π.			
	OM2:	Senal Po	rt			
		Serial Po	n.			
	1.5	Drint to	ile			
	ORTP	Local Po	rt	Microsoft Pri	nt to PDF	
	Add Po	ort		elete Port	Config	ure Port
Ena	ble bidi	rectional	support			
🗌 Ena	ble prin	ter poolir	g			

REPARACIÓN Y MANTENIMIENTO DE LA IMPRESORA

1. Limpieza de la parte exterior y del almacén: utilice un paño húmedo para limpiar suavemente la superficie de la impresora y el almacén interno de papel.

2. Limpieza del núcleo de la impresora: el núcleo de la impresora debe estar limpio a su debido tiempo, especialmente si la calidad de impresión disminuye. Los métodos de limpieza son los siguientes: ponga un algodón humedecido en alcohol anhidro y limpie suavemente las piezas cerámicas del núcleo de la impresora hasta que estén lo suficientemente limpias.

3. Si encuentra agua en el interior de la impresora, desconecte inmediatamente la alimentación de la impresora y séquela de forma natural.

ANÁLISIS DE FALLOS

Fenómeno de fallo	Causa del fallo	Solución
La luz roja de la impresora parpadea	Falta papel en la impresora. La temperatura de la impresora es demasiado alta	Instale el papel correctamente. Enfríe la impresora de forma natural y reiníciela para utilizarla
Cuando la impresora sólo saca papel pero no imprime	Instalación inversa del papel de impresión	Por favor, instale el papel de impresión en sentido contrario.
La impresora imprime borroso	El cabezal de impresión no ha limpiado durante mucho tiempo	Coloque un algodón humedecido en alcohol anhidro y limpie suavemente las piezas cerámicas del núcleo de la impresora hasta que estén lo suficientemente limpias
	El color de los caracteres del papel térmico no es bueno	Elija papel térmico de alta calidad
El inaicador de encendido sólo tiene las últimas luces encendidas	La batería tiene poca carga	Por favor, cargue la batería para evitar que afecte a su uso normal.

